

The Secretary of the Interior's Standards for the Treatment of Historic Properties may be applied to one historic resource type or a variety of historic resource types; for example, a project may include a complex of buildings such as a house, garage, and barn; the site, with a designed landscape, natural features, and archeological components; structures such as a system of roadways and paths or a bridge; and objects such as fountains and statuary.

Historic Resource Types & Examples

Building: houses, barns, stables, sheds, garages, court-houses, city halls, social halls, commercial buildings, libraries, factories, mills, train depots, hotels, theaters, stationary mobile homes, schools, stores, and churches.

Site: habitation sites, funerary sites, rock shelters, village sites, hunting and fishing sites, ceremonial sites, petroglyphs, rock carvings, ruins, gardens, grounds, battlefields, campsites, sites of treaty signings, trails, areas of land, shipwrecks, cemeteries, designed landscapes, and natural features, such as springs and rock formations, and land areas having cultural significance.



Zoar Historic District, Ohio. Aerial view. Photo: National Park Service.



Elmendorf, Lexington, Kentucky. Photo: Charles A. Birnbaum.

Structure: bridges, tunnels, gold dredges, firetowers, canals, turbines, dams, power plants, corn-cribs, silos, roadways, shot towers, windmills, grain elevators, kilns, mounds, cairns, palisade fortifications, earthworks, railroad grades, systems of roadways and paths, boats and ships, railroad locomotives and cars, telescopes, carousels, bandstands, gazebos, and aircraft.

Object: sculpture, monuments, boundary markers, statuary, and fountains.

District: college campuses, central business districts, residential areas, commercial areas, large forts, industrial complexes, civic centers, rural villages, canal systems, collections of habitation and limited activity sites, irrigation systems, large farms, ranches, estates, or plantations, transportation networks, and large landscaped parks.

(Sidebar adapted from National Register Property and Resource Types, p. 15, National Register Bulletin 16A, How to Complete the National Register Form, published by the National Register Branch, Interagency Resources Division, National Park Service, U.S. Department of the Interior, 1991.)

Introduction

Choosing an Appropriate Treatment for the Historic Building

The Standards are neither technical nor prescriptive, but are intended to promote responsible preservation practices that help protect our Nation's irreplaceable cultural resources. For example, they cannot, in and of themselves, be used to make essential decisions about which features of the historic building should be saved and which can be changed. But once a treatment is selected, the Standards provide philosophical consistency to the work.

Choosing the most appropriate treatment for a building requires careful decision-making about a building's historical significance, as well as taking into account a number of other considerations:

Relative importance in history. Is the building a nationally significant resource—a rare survivor or the work of a master architect or craftsman? Did an important event take place in it? National Historic Landmarks, designated for their “exceptional significance in American history,” or many buildings individually listed in the National Register often warrant Preservation or Restoration. Buildings that contribute to the significance of a historic district but are not individually listed in the National Register more frequently undergo Rehabilitation for a compatible new use.

Physical condition. What is the existing condition—or degree of material integrity—of the building prior to work? Has the original form survived largely intact or has it been altered over time? Are the alterations an important part of the building's history?

Preservation may be appropriate if distinctive materials, features, and spaces are essentially intact and convey the building's historical significance. If the building requires more extensive repair and replacement, or if alterations or additions are necessary for a new use, then Rehabilitation is probably the most appropriate treatment. These key questions play major roles in determining what treatment is selected.

Proposed use. An essential, practical question to ask is: Will the building be used as it was historically or will it be given a new use? Many historic buildings can be adapted for new uses without seriously damaging their historic character; special-use properties such as grain silos, forts, ice houses, or windmills may be extremely difficult to adapt to new uses without major intervention and a resulting loss of historic character and even integrity.

Mandated code requirements. Regardless of the treatment, code requirements will need to be taken into consideration. But if hastily or poorly designed, a series of code-required actions may jeopardize a building's materials as well as its historic character. Thus, if a building needs to be seismically upgraded, modifications to the historic appearance should be minimal. Abatement of lead paint and asbestos within historic buildings requires particular care if important historic finishes are not to be adversely affected. Finally, alterations and new construction needed to meet accessibility requirements under the Americans with Disabilities Act of 1990 should be designed to minimize material loss and visual change to a historic building.

Using the Standards and Guidelines for a Preservation, Rehabilitation, Restoration, or Reconstruction Project

The Secretary of the Interior's Standards for the Treatment of Historic Properties with Guidelines for Preserving, Rehabilitating, Restoring and Reconstructing Historic Buildings are intended to provide guidance to historic building owners and building managers, preservation consultants, architects, contractors, and project reviewers prior to treatment.

As noted, while the treatment Standards are designed to be applied to all historic resource types included in the National Register of Historic Places—buildings, sites, structures, districts, and objects—the Guidelines apply to *specific* resource types; in this case, buildings.

The Guidelines have been prepared to assist in applying the Standards to all project work; consequently, they are not meant to give case-specific advice or address exceptions or rare instances. Therefore, it is recommended that the advice of qualified historic preservation professionals be obtained early in the planning stage of the project. Such professionals may include architects, architectural historians, historians, historical engineers, archeologists, and others who have experience in working with historic buildings.

The Guidelines pertain to both exterior and interior work on historic buildings of all sizes, materials, and types. Those approaches to work treatments and techniques that are consistent with *The Secretary of the Interior's Standards for the Treatment of Historic Properties* are listed in the “Recommended” column on the left; those which are inconsistent with the Standards are listed in the “Not Recommended” column on the right.

One chapter of this book is devoted to each of the four treatments: Preservation, Rehabilitation, Restoration, and Reconstruction. Each chapter contains one set of Standards and accompanying Guidelines that are to be used throughout the course of a project. The Standards for the first treatment, *Preservation*, require retention of the greatest amount of historic fabric, along with the building's historic form, features, and detailing as they have evolved over time. The *Rehabilitation* Standards acknowledge the need to alter or add to a historic building to meet continuing or new uses while retaining the building's historic character. The *Restoration* Standards allow for the depiction of a building at a particular time in its history by preserving materials from the period of significance and removing materials from other periods. The *Reconstruction* Standards establish a limited framework for re-creating a vanished or non-surviving building with new materials, primarily for interpretive purposes.

The Guidelines are preceded by a brief historical overview of the primary historic building materials (masonry, wood, and architectural metals) and their diverse uses over time. Next, building features comprised of these materials are discussed, beginning with the exterior, then moving to the interior. Special requirements or work that must be done to meet accessibility requirements, health and safety code requirements, or retrofitting to improve energy efficiency are also addressed here. Although usually not part of the overall process of protecting historic buildings, this work must also be assessed for its potential impact on a historic building.

Historical Overview


Building Exterior *Materials*

Masonry

Stone is one of the more lasting of masonry building materials and has been used throughout the history of American building construction. The kinds of stone most commonly encountered on historic buildings in the U.S. include various types of sandstone, limestone, marble, granite, slate and fieldstone. *Brick* varied considerably in size and quality. Before 1870, brick clays were pressed into molds and were often unevenly fired. The quality of brick depended on the type of clay available and the brick-making techniques; by the 1870s—with the perfection of an extrusion process—bricks became more uniform and durable. *Terra cotta* is also a kiln-dried clay product popular from the late 19th century until the 1930s. The development of the steel-frame office buildings in the early 20th century contributed to the widespread use of architectural terra cotta. *Adobe*, which consists of sun-dried earthen bricks, was one of the earliest building materials used in the U.S., primarily in the Southwest where it is still popular.

Mortar is used to bond together masonry units. Historic mortar was generally quite soft, consisting primarily of lime and sand with other additives. By the latter part of the 19th century, portland cement was usually added resulting in a more rigid and non-absorbing mortar. Like historic mortar, early *stucco* coatings were also heavily lime-based, increasing in hardness with the addition of portland cement in the late 19th century. *Concrete* has a long history, being variously made of tabby, volcanic ash and, later, of natural hydraulic cements, before the introduction of portland cement in the 1870s. Since then, concrete has also been used in its precast form.

While masonry is among the most durable of historic building materials, it is also very susceptible to damage by improper maintenance or repair techniques and harsh or abrasive cleaning methods.

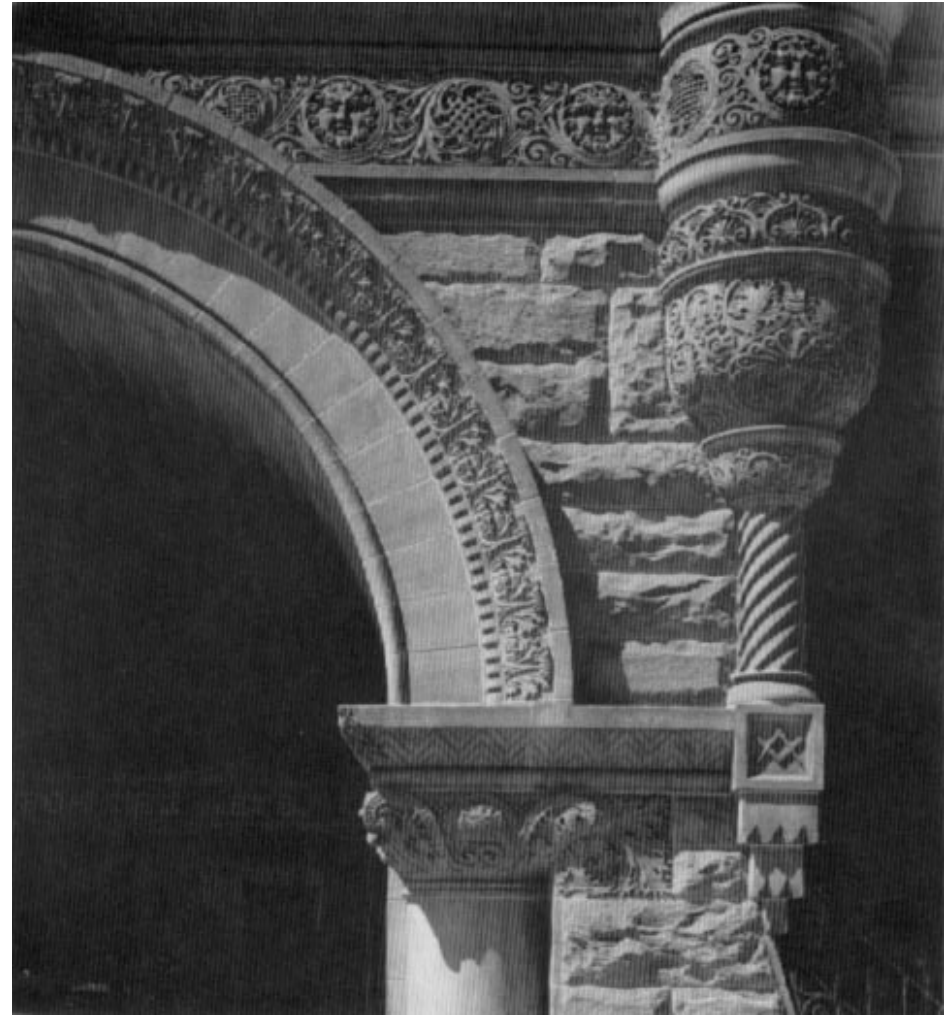

Wood

Wood has played a central role in American building during every period and in every style. Whether as structural members, exterior cladding, roofing, interior finishes, or decorative features, wood is frequently an essential component of historic buildings.


Because it can be easily shaped by sawing, sanding, planing, carving, and gouging, wood is used for architectural features such as clapboard, cornices, brackets, entablatures, shutters, columns and balustrades. These wooden features, both functional and decorative, are often important in defining the historic character of the building.



Architectural Metals

Architectural metal features—such as cast iron facades, porches, and steps; sheet metal cornices, siding, roofs, roof cresting and storefronts; and cast or rolled metal doors, window sash, entablatures, and hardware—are often highly decorative and may be important in defining the overall character of historic American buildings.

Metals commonly used in historic buildings include lead, tin, zinc, copper, bronze, brass, iron, steel, and to a lesser extent, nickel alloys, stainless steel and aluminum. Historic metal building components were often created by highly skilled, local artisans, and by the late 19th century, many of these components were prefabricated and readily available from catalogs in standardized sizes and designs.

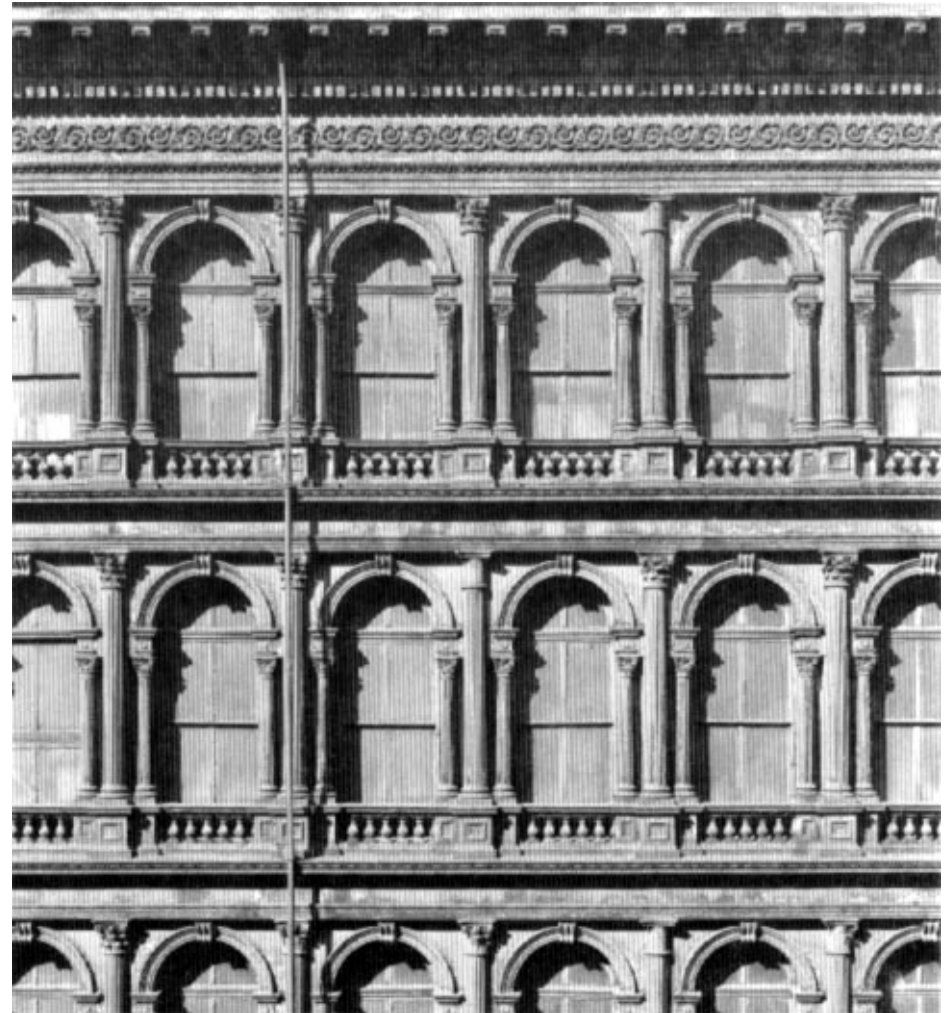

Building Exterior *Features*


Roofs

The roof—with its shape; features such as cresting, dormers, cupolas, and chimneys; and the size, color, and patterning of the roofing material—is an important design element of many historic buildings. In addition, a weathertight roof is essential to the longterm preservation of the entire structure. Historic roofing reflects availability of materials, levels of construction technology, weather, and cost. Throughout the country in all periods of history, *wood shingles* have been used—their size, shape, and detailing differing according to regional craft practices.

European settlers used *clay tile* for roofing at least as early as the mid-17th century. In some cities, such as New York and Boston, clay tiles were popularly used as a precaution against fire. The Spanish influence in the use of clay tiles is found in the southern, southwestern and western states. In the mid-19th century, tile roofs were often replaced by *sheet-metal*, which is lighter and easier to maintain.

Evidence of the use of *slate* for roofing dates from the mid-17th century. Slate has remained popular for its durability, fireproof qualities, and its decorative applications. The use of metals for roofing and roof features dates from the 18th century, and includes the use of *sheet metal*, *corrugated metal*, *galvanized metal*, *tin-plate*, *copper*, *lead* and *zinc*.

New roofing materials developed in the early 20th century include built-up roll roofing, and concrete, asbestos, and asphalt shingles.

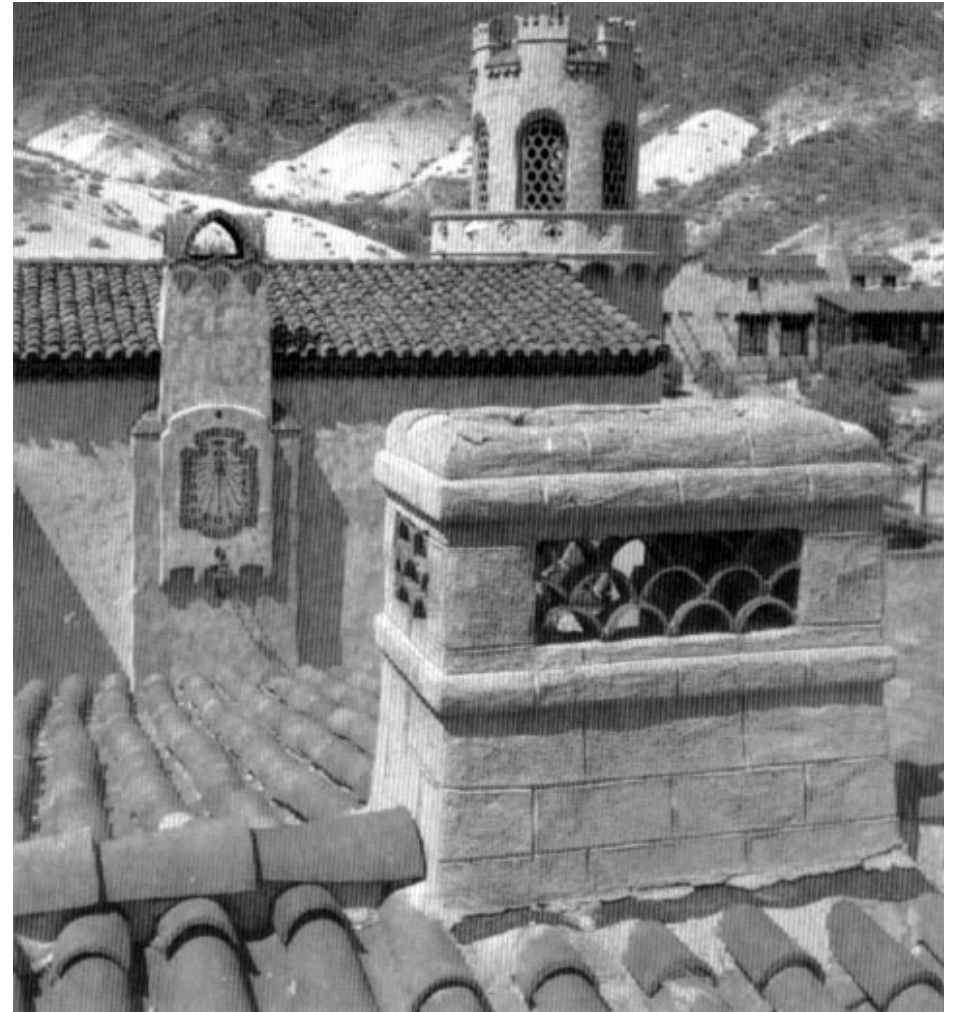


Windows

Technology and prevailing architectural styles have shaped the history of windows in the United States starting in the 17th century with wooden casement windows with tiny glass panes seated in lead comes. From the transitional single-hung sash in the early 1700s to the true double-hung sash later in the century, these early wooden windows were characterized by small panes, wide muntins, and decorative trim. As the sash thickness increased, muntins took on a thinner appearance as they narrowed in width but increased in thickness.


Changes in technology led to larger panes of glass so that by the mid-19th century, two-over-two lights were common; the manufacture of plate glass in the United States allowed for use of large sheets of glass in commercial and office buildings by the late 19th century. With mass-produced windows, mail order distribution, and changing architectural styles, it was possible to obtain a wide range of window designs and light patterns in sash. Early 20th century designs frequently utilized smaller lights in the upper sash and also casement windows. The desire for fireproof building construction in dense urban areas contributed to the growth of a thriving steel window industry along with a market for hollow metal and metal clad wooden windows.

As one of the few parts of a building serving as both an interior and exterior feature, windows are nearly always an important part of a historic building.

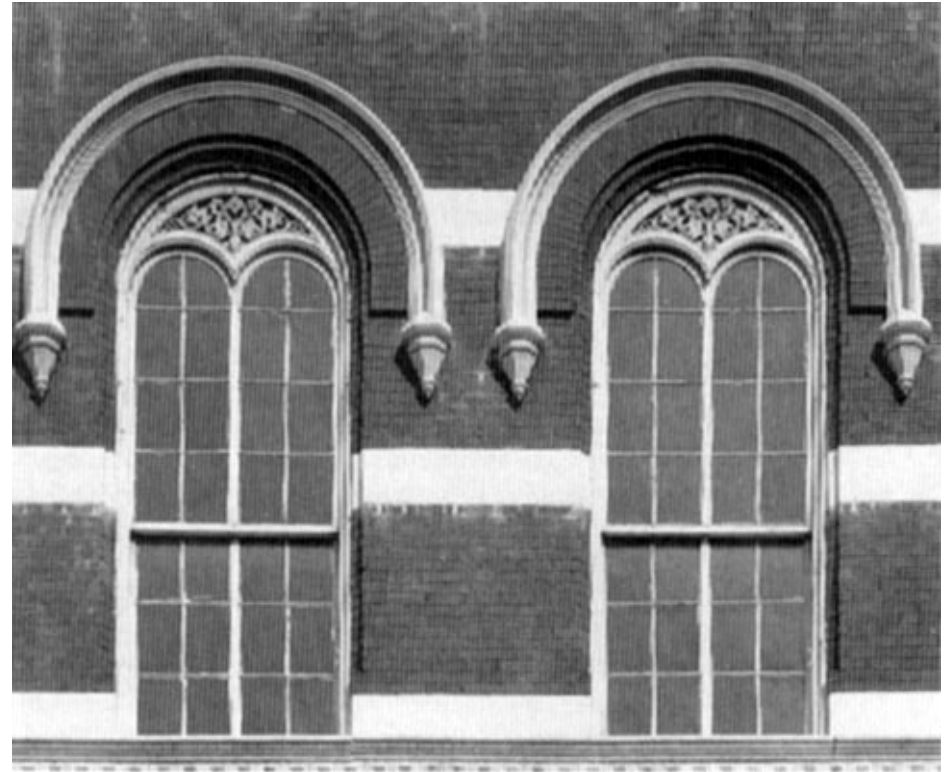

Entrances and Porches


Entrances and porches are quite often the focus of historic buildings, particularly on primary elevations. Together with their functional and decorative features such as doors, steps, balustrades, pilasters, and entablatures, they can be extremely important in defining the overall character of a building. In many cases, porches were energy-saving devices, shading southern and western elevations. Usually entrances and porches were integral components of a historic building's design; for example, porches on Greek Revival houses, with Doric or Ionic columns and pediments, echoed the architectural elements and features of the larger building. Central one-bay porches or arcaded porches are evident in Italianate style buildings of the 1860s. Doors of Renaissance Revival style buildings frequently supported entablatures or pediments. Porches were particularly prominent features of Eastlake and Stick Style houses in which porch posts, railings, and balusters were characterized by a massive and robust quality, with members turned on a lathe. Porches of bungalows of the early 20th century were characterized by tapered porch posts, exposed post and beams, and low pitched roofs with wide overhangs. Art Deco commercial buildings were entered through stylized glass and stainless steel doors.

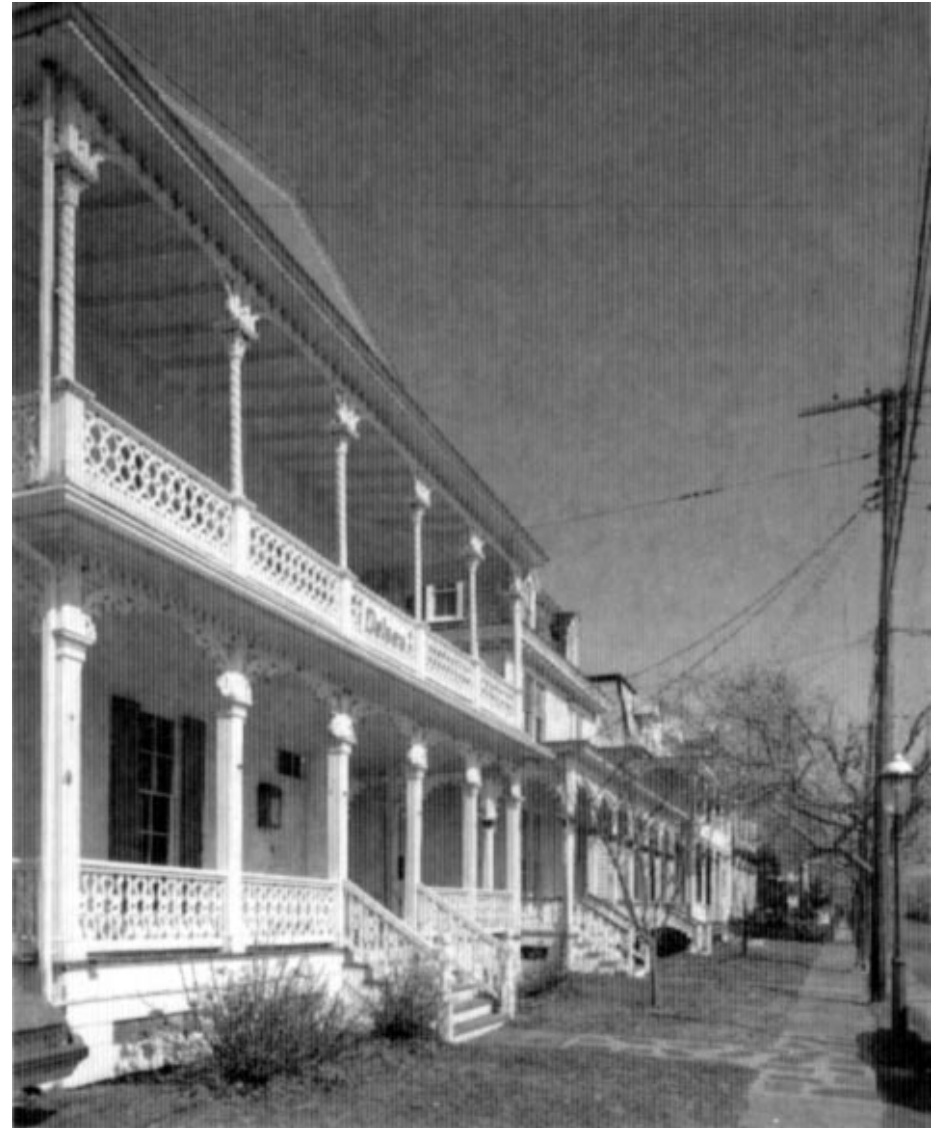

Storefronts

The earliest extant storefronts in the U.S., dating from the late 18th and early 19th centuries, had bay or oriel windows and provided limited display space. The 19th century witnessed the progressive enlargement of display windows as plate glass became available in increasingly larger units. The use of cast iron columns and lintels at ground floor level permitted structural members to be reduced in size. Recessed entrances provided shelter for sidewalk patrons and further enlarged display areas. In the 1920s and 1930s, aluminum, colored structural glass, stainless steel, glass block, neon, and other new materials were introduced to create Art Deco storefronts.

The storefront is usually the most prominent feature of a historic commercial building, playing a crucial role in a store's advertising and merchandising strategy. Although a storefront normally does not extend beyond the first story, the rest of the building is often related to it visually through a unity of form and detail. Window patterns on the upper floors, cornice elements, and other decorative features should be carefully retained, in addition to the storefront itself.

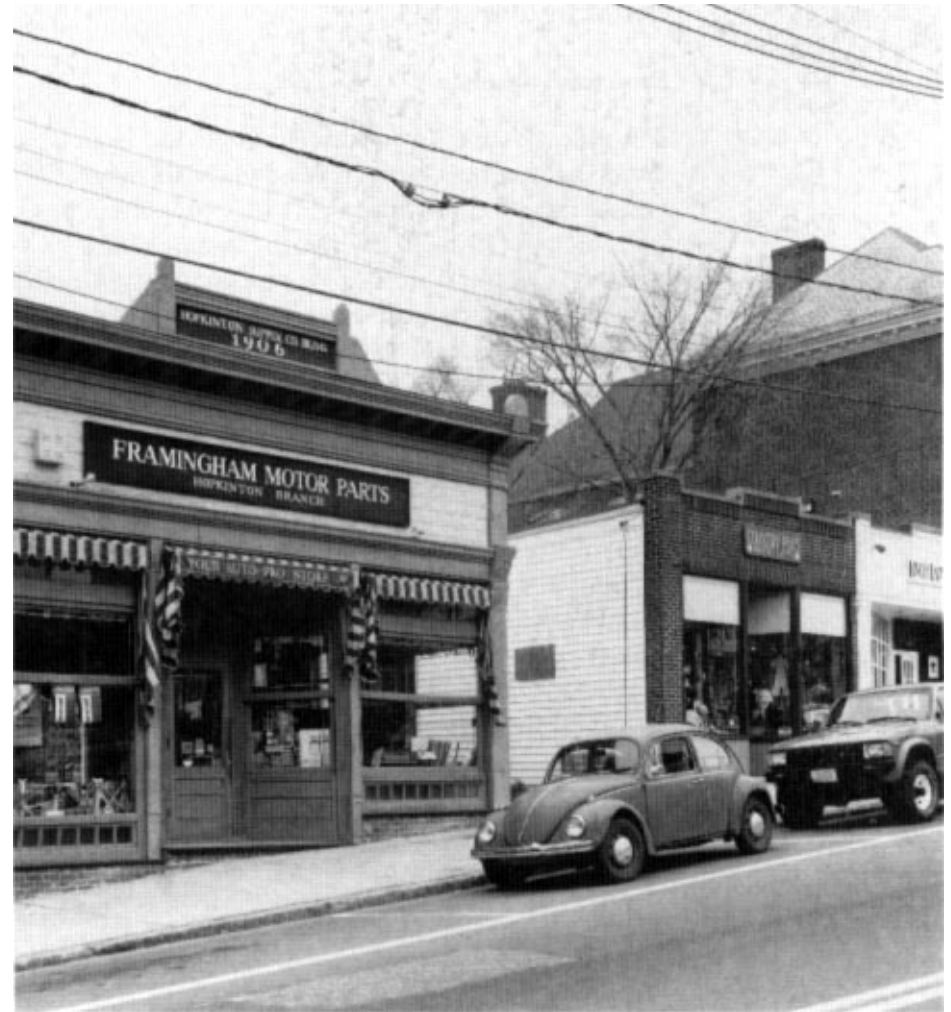


Building Interior

Structural Systems

The types of structural systems found in the United States include, but are not limited to the following: wooden frame construction (17th c.), balloon frame construction (19th c.), load-bearing masonry construction (18th c.), brick cavity wall construction (19th c.), heavy timber post and beam industrial construction (19th c.), fireproof iron construction (19th c.), heavy masonry and steel construction (19th c.), skeletal steel construction (19th c.), and concrete slab and post construction (20th c.).

If features of the structural system are exposed such as loadbearing brick walls, cast iron columns, roof trusses, posts and beams, vigas, or stone foundation walls, they may be important in defining the building's overall historic character. Unexposed structural features that are not character-defining or an entire structural system may nonetheless be significant in the history of building technology. The structural system should always be examined and evaluated early in the project planning stage to determine its physical condition, its ability to support any proposed changes in use, and its importance to the building's historic character or historical significance.

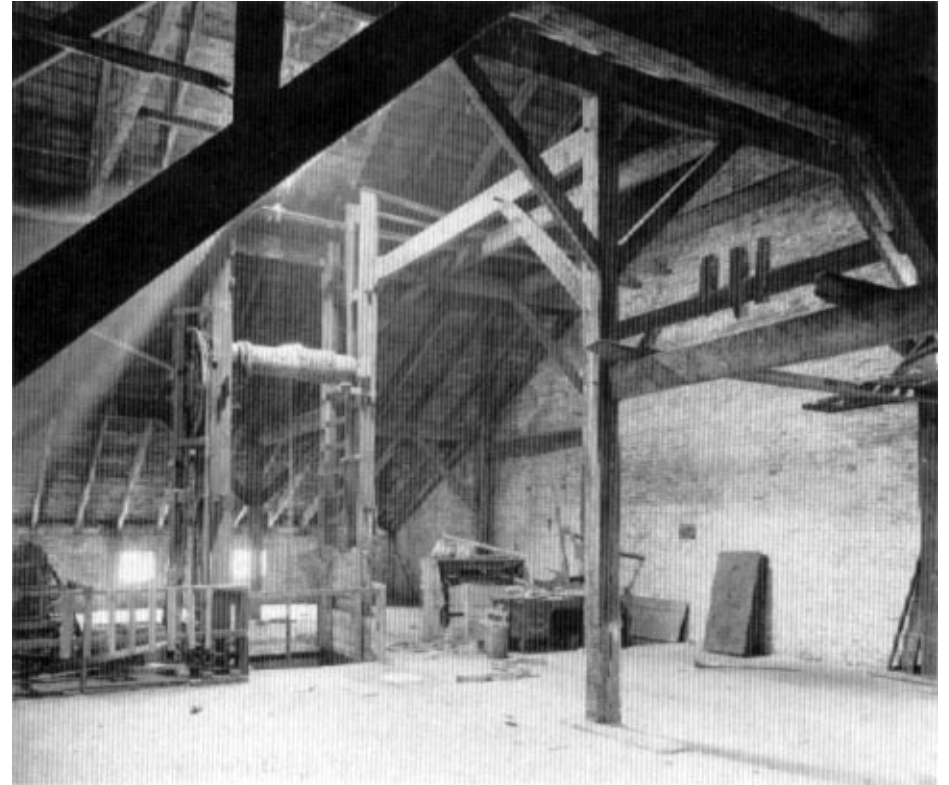

Spaces, Features, and Finishes

An interior floor plan, the arrangement and sequence of spaces, and built-in features and applied finishes are individually and collectively important in defining the historic character of the building. Interiors are comprised of a series of primary and secondary spaces. This is applicable to all buildings, from courthouses to cathedrals, to cottages and office buildings. Primary spaces, including entrance halls, parlors, or living rooms, assembly rooms and lobbies, are defined not only by their function, but also by their features, finishes, size and proportion.

Secondary spaces are often more functional than decorative, and may include kitchens, bathrooms, mail rooms, utility spaces, secondary hallways, firestairs and office cubicles in a commercial or office space. Extensive changes can often be made in these less important areas without having a detrimental effect on the overall historic character.




Mechanical Systems

Mechanical, lighting and plumbing systems improved significantly with the coming of the Industrial Revolution. The 19th century interest in hygiene, personal comfort, and the reduction of the spread of disease were met with the development of central heating, piped water, piped gas, and network of underground cast iron sewers. Vitreous tiles in kitchens, baths and hospitals could be cleaned easily and regularly. The mass production of cast iron radiators made central heating affordable to many; some radiators were elaborate and included special warming chambers for plates or linens. Ornamental grilles and registers provided decorative covers for functional heaters in public spaces. By the turn of the 20th century, it was common to have all these modern amenities as an integral part of the building.

The greatest impacts of the 20th century on mechanical systems were the use of electricity for interior lighting, forced air ventilation, elevators for tall buildings, exterior lighting and electric heat. The new age of technology brought an increasingly high level of design and decorative art to many of the functional elements of mechanical, electrical and plumbing systems.

The visible decorative features of historic mechanical systems such as grilles, lighting fixtures, and ornamental switchplates may contribute to the overall historic character of the building. Their identification needs to take place, together with an evaluation of their physical condition, early in project planning. On the other hand, mechanical systems need to work efficiently so many older systems, such as compressors and their ductwork, and wiring and pipes often need to be upgraded or entirely replaced in order to meet modern requirements.

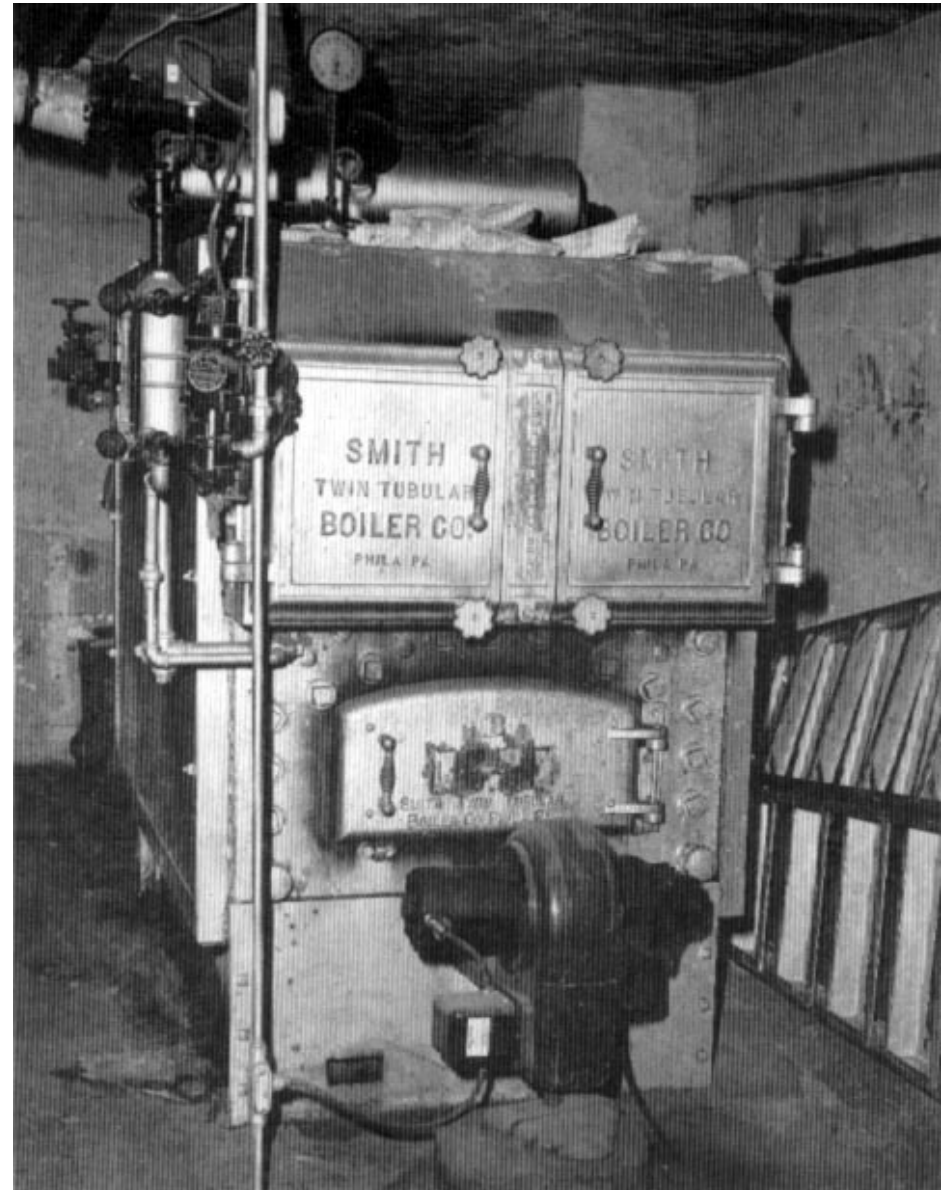

Building Site

The building site consists of a historic building or buildings, structures, and associated landscape features within a designed or legally defined parcel of land. A site may be significant in its own right, or because of its association with the historic building or buildings. The relationship between buildings and landscape features on a site should be an integral part of planning for every work project.

Setting (District/Neighborhood)

The setting is the larger area or environment in which a historic property is located. It may be an urban, suburban, or rural neighborhood or a natural landscape in which buildings have been constructed. The relationship of buildings to each other, setbacks, fence patterns, views, driveways and walkways, and street trees together create the character of a district or neighborhood.



Special Requirements

Work that must be done to meet accessibility requirements, health and safety requirements or retrofitting to improve energy efficiency is usually not part of the overall process of protecting historic buildings; rather, this work is assessed for its potential impact on the historic building.

Energy Efficiency

Some features of a historic building or site such as cupolas, shutters, transoms, skylights, sun rooms, porches, and plantings can play an energy-conserving role. Therefore, prior to retrofitting historic buildings to make them more energy efficient, the first step should always be to identify and evaluate existing historic features to assess their inherent energy-conserving potential. If it is determined that retrofitting measures are appropriate, then such work needs to be carried out with particular care to ensure that the building's historic character is retained.

Accessibility Considerations

It is often necessary to make modifications to a historic building so that it will be in compliance with current accessibility code requirements. Accessibility to certain historic structures is required by three specific federal laws: the Architectural Barriers Act of 1968, Section 504 of the Rehabilitation Act of 1973, and the Americans with Disabilities Act of 1990. Federal rules, regulations, and standards have been developed which provide guidance on how to accomplish access to historic areas for people with disabilities. Work must be carefully planned and undertaken so that it does not result in the loss of character-defining spaces, features, and finishes. The goal is to provide the highest level of access with the lowest level of impact.



Health and Safety Considerations

In undertaking work on historic buildings, it is necessary to consider the impact that meeting current health and safety codes (public health, occupational health, life safety, fire safety, electrical, seismic, structural, and building codes) will have on character-defining spaces, features, and finishes. Special coordination with the responsible code officials at the state, county, or municipal level may be required. Securing required building permits and occupancy licenses is best accomplished early in work project planning. It is often necessary to look beyond the “letter” of code requirements to their underlying purpose; most modern codes allow for alternative approaches and reasonable variance to achieve compliance.

Some historic building materials (insulation, lead paint, etc.) contain toxic substances that are potentially hazardous to building occupants. Following careful investigation and analysis, some form of abatement may be required. All workers involved in the encapsulation, repair, or removal of known toxic materials should be adequately trained and should wear proper personal protective gear. Finally, preventive and routine maintenance for historic structures known to contain such materials should also be developed to include proper warnings and precautions.

